



GR-03 Rideable Golf Trolley Instruction

User Manual





Contents

1. Safety Instruction	3
2. Part instruction	4
3. Folding Operation	5
4. Push Cart Mode.....	7
5. Driving Instructions	8
6. Handlebar Description	9
7. Instrument Description.....	10
8. Battery Instructions	11
9. Cleaning and Maintenance.....	12
10. Warranty.....	13
11. Specification	16
12. Information on the disposition	17



Safety Instruction


Read the instructions and safety instructions carefully before starting with this product

Warn:

- To reduce the risk of electric shock, do not remove the cover plate. There are no user-serviceable parts inside. Please have qualified maintenance personnel repair it.
- Do not immerse the equipment in water or other liquids.
- Maintenance of electrical appliances should only be performed by qualified personnel. Improper maintenance may put the user or equipment at serious risk.
- This equipment is suitable for domestic use and can also be used for industrial or commercial purposes.
- Do not operate this equipment if it has been dropped or damaged in any way.
- If the power adapter is damaged, it must be replaced by the manufacturer or similarly qualified personnel to avoid hazards. Do not use this equipment for any other purposes.
- Do not push objects into any openings, as this may damage the equipment.
- Check for damaged or loose parts before use.
- Do not modify any part of the product. This can impair the product's performance and significantly increase the risk of injury.
- This device is only suitable for individuals aged 12 years or older, or for individuals with physical, sensory, or mental disabilities who have the necessary experience and skills to safely supervise or instruct its use, ensuring they understand the potential hazards associated with this product.
- Children are not allowed to play with this product.
- Cleaning and user maintenance should not be performed by children without supervision.



Part instruction

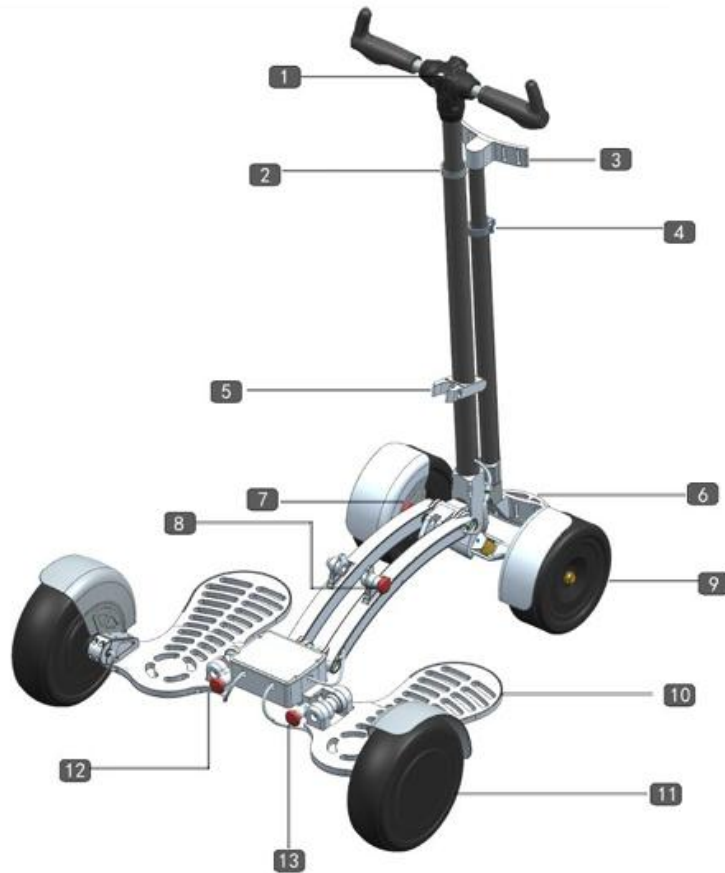

Golf Trolley Components:

1. Power Supply Switch
2. Steering Rod
3. Upper Golf Bag Holder
4. Golf Bag Stand Rod
5. Steering Rod Positioning Block
6. Lower Golf Bag Holder
7. Vertical Fixation Pin
8. Direction Rod Positioning Pin
9. Front Wheel
10. Pedal
11. Rear Wheel
12. Left Pedal Positioning Pin
13. Right Pedal Positioning Pin



Folding Operation

Unfolding of the Golf Bag Trolley




STEP 1
→ Pull the pin A and the pin B
→ Rotate the left and right foot pedals outward by 90 degrees.




STEP 2
→ After rotating the left and right foot pedals by 90 degrees, the pins will automatically lock into place.



Unfolding of the Golf Bag Trolley

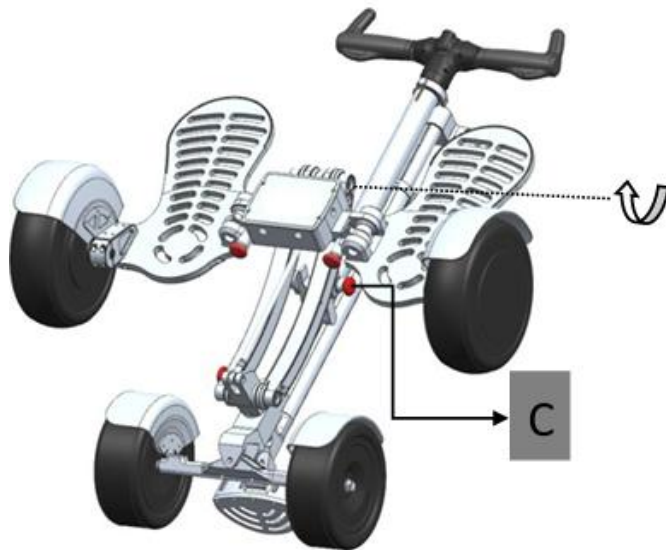


STEP 3
→ Pull the pin C
→ Rotate the left and right pedals out

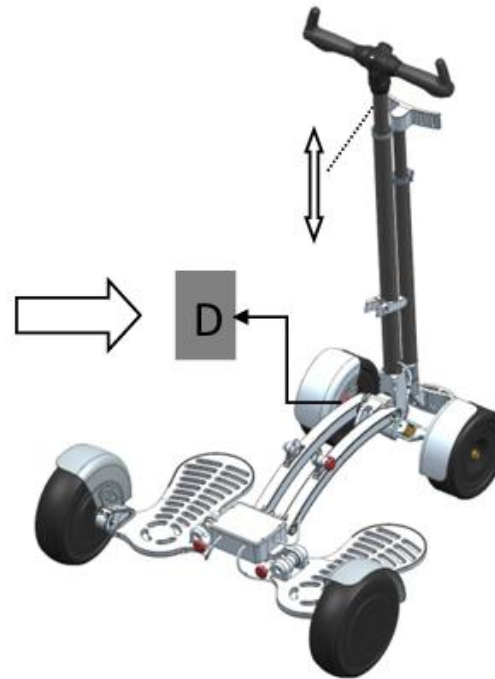

STEP 4
→ Push the direction rod to the vertical position until pin D inserts into the fixation hole
→ Adjust the orientation bar to the appropriate height and lock



Push Cart Mode

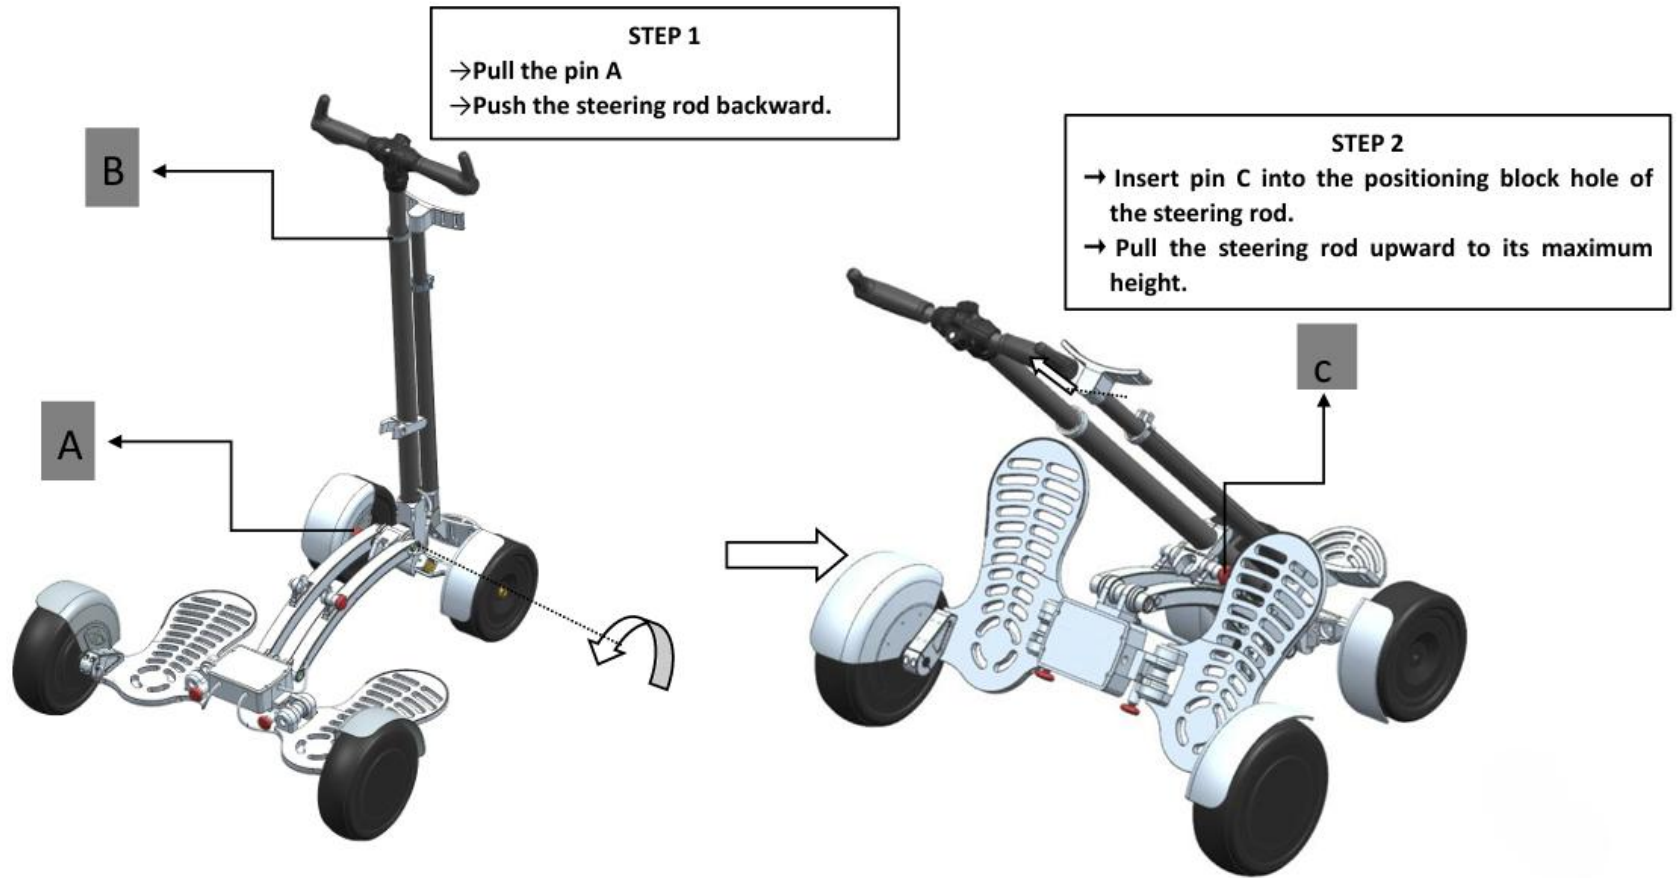



Driving Instructions

Please drive slowly (3-15 km/h) or stop when you encounter obstacles (such as thresholds, or potholes). It's more of a sports device than a car. But if you drive it to a public area, it is a vehicle, so it may also pose a safety risk to other vehicles. If you follow the instructions in the operating manual, you will be able to maximize the safety of yourself and others. As with all vehicles, braking distances can become longer at high speeds, and braking completely on smooth roads can lead to loss of balance and even falling from skid wheels. Be careful and slow down when you enter the unknown terrain and be aware of the priority when driving.

In countries and regions where there are no ball cart standards and regulations, you must strictly follow the driver's safety regulations. The Company shall not assume any direct liability for the property damage, personal injuries, accidents, lawsuits and other adverse events caused by the non-compliance with the information contained in this manual.

To avoid injury, please do not lend it to anyone who doesn't know how to use it. Please instruct him / her and tell him / her that if you lend this device to your friend, he / she should wear a helmet and protective suit. Check the equipment before each drive.




Cycling mode: Keep your center of gravity toward the rear, and stand as far back on the pedals as possible. Depending on your height, adjust the steering rod to a comfortable height and lock it in place. Then, firmly grip the handlebar and smoothly turn the throttle to gradually accelerate the vehicle. **To brake, rotate the handle backward.** To steer, use the steering rod to swing left or right, as shown in the left diagram.

Push Cart mode: By adjusting the position of the steering rod, insert the positioning block into the steering rod pin to achieve the tilted pushcart mode. Pull the steering rod out to a reasonable length so that both hands can easily grip the handlebar. When pushing the golf cart, rotate the throttle to activate the electric boost function, allowing for an easier and more convenient ride.




Handlebar Description

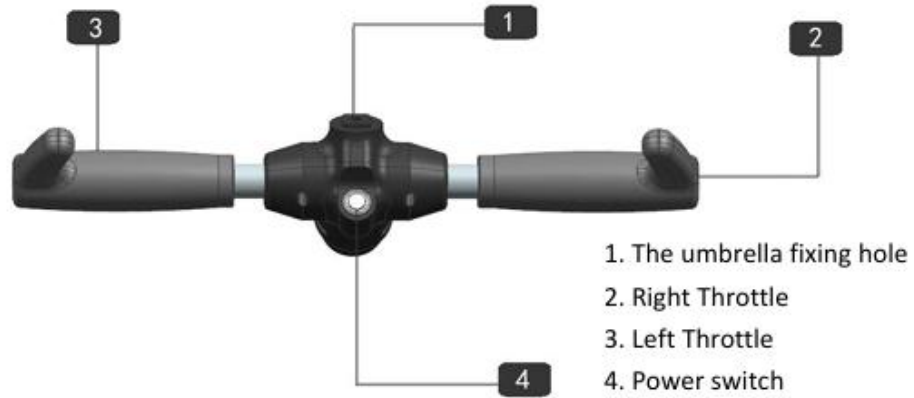





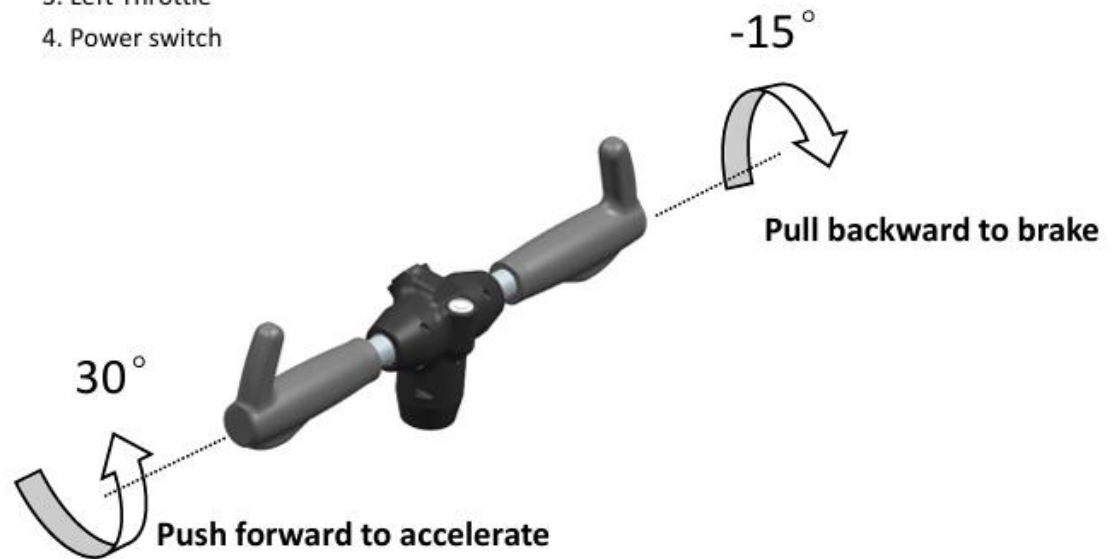

- 1. The umbrella fixing hole
- 2. Right Throttle
- 3. Left Throttle
- 4. Power switch


The handlebar is a one-piece throttle and brake. Rotate the handle forward to accelerate and rotate it backward to brake.



Instrument Description

The vehicle control switch is a buttons witch with LED display that can display blue, red, and pink for various functions.

Icon	Operate	Display	Functional Description
	Short press	Power on, the blue is always bright	Default mode (0-15 km/h), normal power
	Short press	Blue flashing	High speed mode (0-25 km/h), when pressing the switch again, will switch to the default mode
	Short press twice	Red flashes, and the buzzer rings	Reverse mode
	Long press	light goes out	shut down
		purple	Low power, power is <30% The low power mode only supports 0-15 km/h
		blinking red lamp	Vehicle fault, the number of flashes corresponds to the fault code

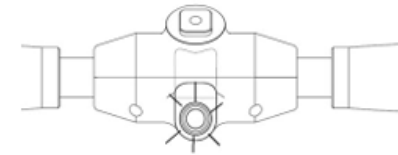




Battery Instructions

The battery is an integrated, standalone unit with a voltage of 48V and can reach up to 53V when fully charged. Different capacity options for the battery are available.

The battery and the golf trolley are connected using waterproof connectors. The connectors are plug-in type. Please align the two connectors according to the arrow markings and tighten the screws.

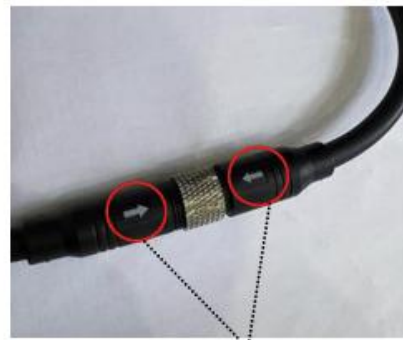

arrow indication



- 1 Red 3 Green--100%
- 1 Red 2 Green--75%
- 1 Red 1 Green--50%
- 1 Red 0 Green--25%

Check the battery capacity before use.

Charging: Please use the included charger for charging. Open the dust cover, connect the charger, and the red light on the charger will turn on to indicate that charging is in progress.

Once fully charged, the green light will turn on. After charging, please close the dust cover and test the voltage to ensure it is fully charged. The testing method is shown in the right diagram.





Cleaning and Maintenance

If you find any stains on the shell of the electric ball cart, wipe the vehicle with a soft, damp cloth. You can use toothpaste and a toothbrush to remove stains from the ball cart. If you find scratched plastic debris, use sandpaper or other grinding material to polish them.

Warning: Do not use alcohol, gasoline, kerosene, or other corrosive solutions or volatile chemical solvent cleaning equipment. This would cause serious damage to the shell of the golf cart and could damage the structure of the internal components. Do not clean the ball cart with a powerful water spray. Make sure that the ball cart is going offline / off condition. If you don't use a ball cart, keep it in a dry, cool place and don't keep it on the road for too long. Exposing the equipment to sunlight, high or low temperatures may result in rapid aging of the housing and wheels of the electric ball cart or shortened battery life. Electric ball cart battery maintenance.

1. Do not use batteries from other manufacturers to avoid dangerous situations.
2. Do not open or remove the battery to avoid electric shock. Avoid contact with the exposed conductor to avoid a short circuit. Otherwise, a battery failure or a user injury may occur.
3. It is recommended to use the power adapter included in the original equipment configuration to avoid vehicle accidents or fire.
4. Used batteries and batteries should not be discarded as food waste. Let us unite to reject the root causes of serious pollution. Do not discard the battery, according to local laws, please properly handle, protect the environment!
5. Charge the battery after each use to extend the battery life. Do not store ball cart batteries in dangerous places. For example, the temperature may exceed 50C or below-20°C (for example, let the ball cart battery and other car batteries together, do not lie in the hot sun in summer), do not put the battery close to the fire source, because it will damage the battery, overheat and even lead to fire.

If the ball cart is not used within 30 days, please recharge. Keep the batteries in a cool, dry place. The battery must be charged every 60 days, or the battery will fail. Avoid full discharge to extend the battery life. If you use it at normal room temperature, the battery can go further and perform better. But if you use a ball cart below 0°C, the vehicles performance and permeability will decline. At the-20°C, the range is half or shorter than the range of the ball cart under normal conditions. As the temperature increases, the distance of the vehicle traveled also increases.

Note: The standby time of a fully loaded ball cart is 120-180 days. The battery has a smart chip for charging and discharge information management. If you do not charge the battery for a long time, this will cause serious damage to require recharging of the devices.

Note: Unauthorized person shall not use the equipment. Injuries caused by a dismantled short circuit due to electric shock or greater danger



Warranty

Warranty is made in accordance with the Consumer Rights Act and the Product Quality Act. The warranty scope includes:

Name	Warranty Instructions	Time
Main Components	Wheel motor, Throttle, Steering rod, Golf bag holder, Controller, Front fork, Front wheel	One Year
Other Components	Battery, Charger, Button switch, Connector cable, Tube clamp	Six Months
Easy wear and tear	Fenders, Handlebar grip cover, Tires	Three Months

Pay Attention To:

Hagonal tools, belts, pedals, and other vulnerable parts are not guaranteed.

Proposal:

Use the packaging to ensure the safe transportation of the equipment. We recommend keeping the original packaging for at least 15 days after receiving the goods.

GOZO Separate Warranty Provided If:

Legal warranty provisions and claims arising from the Product Liability Act shall not be affected. Any claim by the purchaser for subsequent performance or damages for defects shall also remain valid if the proper conditions exist. This warranty applies to GOZO GOLF car models and is valid for 12 months from the date of purchase.



After Riding the Bike:

Do not forget to turn it off and charge the battery. If the battery discharges excessively, it may become damaged. Damage caused by improper use is not covered under the warranty.

Note:

The battery warranty period is 6 months, starting from the date of purchase.

The warranty covers defects in materials, design, and workmanship, provided that these defects existed at the time of delivery and that the product was used as intended by the buyer. Wear parts and service materials are not included in the warranty.

During the warranty period, free repair, replacement of defective parts, or replacement of damaged products is provided. The corresponding electoral rights are vested with GOZO.

In Case of a Fault/Defect:

1. Notify the dealer immediately and specify the issues encountered.
2. If the problem cannot be resolved, thoroughly clean the product, including all accessories, and package it in a transport-safe manner as directed by the dealer.
3. Include the following information and documents:
 - Name and address (also indicated on the outside of the package)
 - Product number and serial number (if applicable)
 - Original purchase documents
 - Details of damage during transportation: package service name and package number

Transportation Guidelines:

We strongly recommend using the original carton for transport-safe packaging. If a different package is used, ensure it provides adequate protection against typical transportation hazards. Simple cardboard packaging and paper lining are insufficient. GOZO is not liable for any damage caused by improper packaging and is exempt from warranty claims in such cases.



Warranty rights are invalid if:

1. Misapplication.
2. Incorrect operation, care, and / or maintenance or storage (e. g. damage due to moisture or heat)
3. Any type of repair, repair attempt and modification, and use of third party spare parts and accessories, etc., by someone other than an authorized professional company.
4. Improper transport packaging and / or improper transport has inappropriate mechanical effects on the product or product components.
5. In any event not involving processing and manufacturing, the product is justified (such as fall, impact, damage), external influence, fire, earthquake, flood loss, lightning strike, etc.).
6. For use other than private use, especially for commercial use.




1. Specification

Category	Specification
Battery	48V 14Ah Chinese Swappable Battery
Color	Black
Certificates	CE
Max Loading	110 KG
Power	800W * 2 Brushless Dual Motor
Materials	Aluminum Alloy
Max Speed	25 km/h
Max Climb	≤ 20°
Turning Radius	≤ 1.8 m
Range	20-35 km
Charging Time	6-8 hours
Tire Size	10 inches rear wheel pneumatic tire
Brake	E-brake + Parking brake
Handlebar Height	100-140 cm
Product Size	86 * 97 * 114 cm
N.W.	28 KG



2. Information on the disposition

Garbage can't be treated through household garbage! If the ball cart cannot be reused, all consumers have a legal obligation to take it to a separate collection point, for example in their community, rather than through household waste disposal. This will ensure that waste equipment is properly recycled and will avoid adverse effects on the environment. That is why the appliances are marked with this symbol. Write a damaged or used battery to the icon on the battery

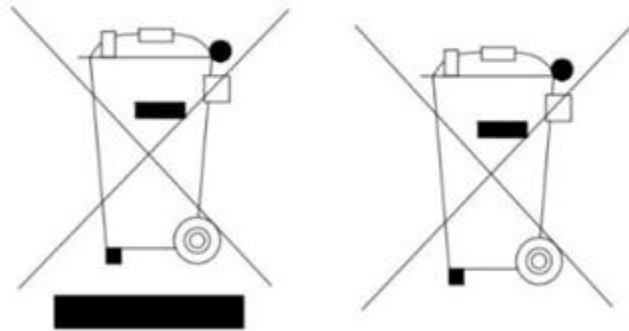

Dispose of the packaging neatly.

Handle paper and cardboard as waste paper.

Collect valuable items

Gozo Golf Inc.

Address: 1329 Matheson Blvd E, Mississauga, ON L4W 1R1

Email: service@gozogolf.com

Phone: +1 9055681880

